⚠ 1. Safety precautions

/

The products in this manual are industrial products and are all open-type housing designs. It is essential to install these products within a control cabinet that is safeguarded against dust, moisture, and accidents such as electric shocks or physical impacts. Additionally, protective measures must be taken to prevent malfunctions or damage caused by improper operation or accidents involving non-maintenance personnel. Failure to do so may lead to serious risks to personnel safety and potential loss of prope r y.

E630

Please refer to the E630 series variable frequency drive (VFD) manual for more detailed information.

2. Model identification

HDv E630 - 4T 037 B S - ***

1 2 3 4 5 6 7

	Product name
HDv	Hechuan VFD

	Product series	
E630	E630	E630 series

	oduct set	
2S	Single phase	220V~240V
4T	Three-phase	380V~480V

	* Power class*
0.7	750W
1.5	1.5kW
2.2	2.2kW
3.7	3.7kW
5.5	5.5kW
7.5	7.5kW
011	11kW
015	15kW
018	18kW
022	22kW
037	37kW
....	....
400	400kW

	Braking component
(N/A)	Without brake unit
B	With brake unit

	STO	STO Function
(N/A)	STO Without STO function	
S	STO	With STO function

	/ Customized software/firmware code
X	0~9/A~Z/ (N/A)

* >160kW

Note: The planning for power greater than 160 kW is in progress.

3. General electrical and environmental specifications

3.1 General electrical speci f cations

Model	(Power capacity)	Input current	(Output current)	Compatible motor	VFD cooling air f ow
	kVA	A	A	kW	cfm
Single-Phase power supply 200V AC ~ 240V AC -15% ~ +10% ; 50/60Hz±5% 47Hz~ 63Hz					
HDV-E630-2S0.4*	1.4	5.4	2.3	0.4	10
HDV-E630-2S0.7*	2.2	8.2	4	0.75	
HDV-E630-2S1.5*	3.7	14	7	1.5	
HDV-E630-2S2.2*	6	23	9.6	2.2	26
HDV-E630-2S4.0*	8.9	14.6	13	4	
Three-Phase power supply 380V AC ~ 480V AC -15% ~ +10% ; 50/60Hz±5% 47Hz~ 63Hz					
HDv-E630-4T0.7*	1.5	3.4	2.1	0.75	10
HDv-E630-4T1.5*	3	5	3.8	1.5	
HDv-E630-4T2.2*	4	5.8	5.1	2.2	
HDv-E630-4T3.7*	5.9	10.5	9	3.7	26
HDv-E630-4T5.5*	8.9	14.6	13	5.5	
HDv-E630-4T7.5*	11	20.5	17	7.5	
HDv-E630-4T11	17	26	25	11	52
HDv-E630-4T15	21	35	32	15	
HDv-E630-4T18	24	38.5	37	18.5	130
HDv-E630-4T22	30	46.5	45	22	
HDv-E630-4T30	40	62	60	30	
HDv-E630-4T37	57	76	75	37	157
HDv-E630-4T45	69	92	91	45	
HDv-E630-4T55	85	113	112	55	200
HDv-E630-4T75	114	157	150	75	
HDv-E630-4T90	134	180	176	90	360
HDv-E630-4T110	160	214	210	110	
HDv-E630-4T132	192	256	253	132	630
HDv-E630-4T160	231	307	304	160	

*

*Note: The product is under research and development.

3.2 Environmental requirements

	Item		Specif cations
	Altitude	≤1000m 1000~3000m 2%/100m	Altitude ≤ 1000m (For altitudes ranging from 1000 to 3000 meters, a 2% derating is required for every 100 meters.)
	Operating environment		Installation within a control cabinet, open-type and indoor use

CN

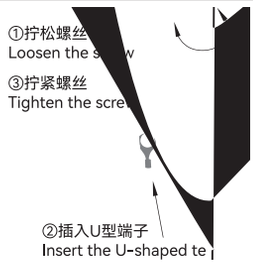
①拧松螺丝
Loosen the s w
③拧紧螺丝
Tighten the scre
②插入U型端子
Insert the U-shaped te

(Screen printing)	(Indicator meaning)	(Color)		Status	Description
RUN	(Power supply indicator)	(Red)		Not lit	Bus in powered-of f state
				Lit	Bus in powered-up state

face description		
kW	37~45kW	55~110kW

IO　　IO wiring

Type	Digital input wiring		High-speed input wiring	
	(Internal power supply wiring)	(External power supply wiring)	(Internal power supply wiring)	(External power supply wiring)
(NPN Input)	短路片或导 (PNP Input)			